
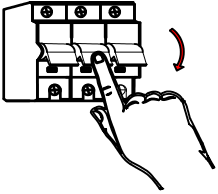
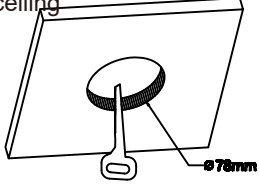
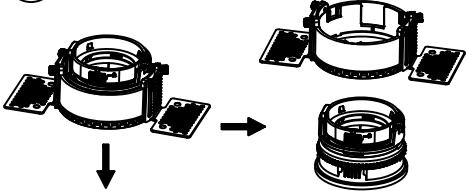
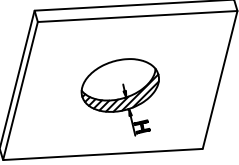
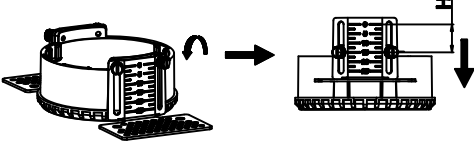
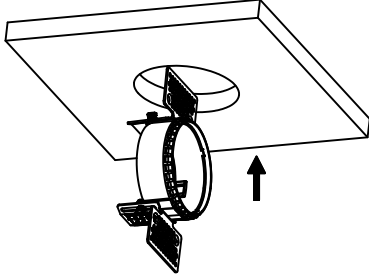
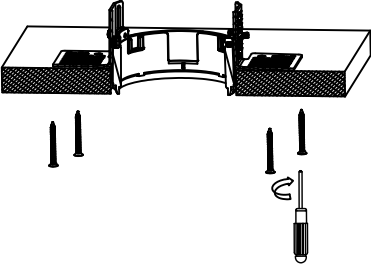
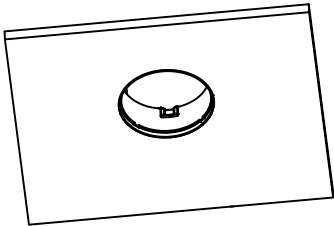
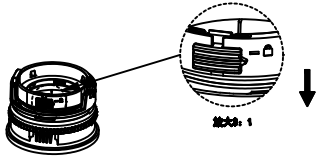
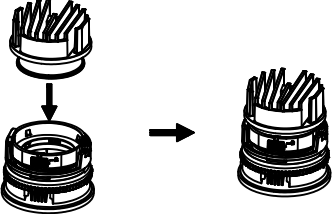
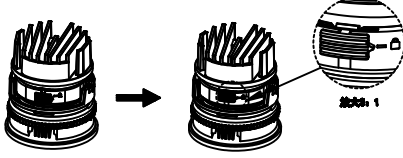
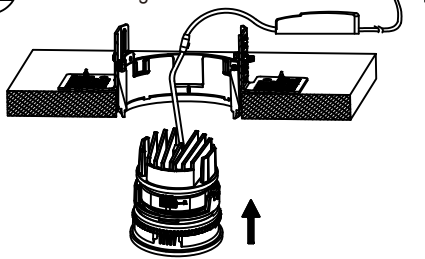


RAY Residence Installation Instruction

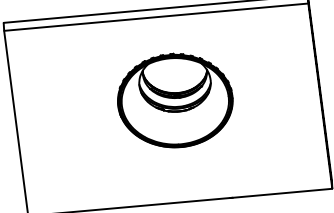

<p>1 Turn off the power.</p> 	<p>2 Open a 78mm cutout hole on the ceiling</p> 	<p>3 Pull the inner ring out from the outer ring.</p> 
<p>4 Measure the thickness of the ceiling.</p> 	<p>5 Release the screw of installation bracket in anti-clockwise direction, adjust the installation bracket's height according to the ceiling thickness, fix the screw in clockwise direction</p> 	<p>6 Put the outer ring into the ceiling.</p> 
<p>7 Screw and fix the installation bracket.</p> 	<p>8 Plastering.</p> 	<p>9 Push downward the button to the "unlock" position.</p> 
<p>10 Fit the module into the frame.</p> 	<p>11 Push upward the button to the "lock" position.</p> 	<p>12 Connect to the power, push the inner ring into outer ring</p> 
<p>13 Finish.</p> 	<p>14 Turn on the power.</p> 